

## Some Other Features to Know About...

### Basic Channel Selection

Press the Preset/Direct button until "Direct Entry" displays, then:

- Use Number Keys: Press the number keys in the bottom row to enter a channel number, for example 5+0 for channel 50 or 1+2+1 for channel 121.
- Use the Tuning Wheel: Turn the Tuning Wheel to increase or decrease channel number; then press it in to select that channel.

### Presets

Your Delphi XM Roady has three banks of presets: A, B, and C. Each bank of presets can hold up to 10 channels.

To set a preset, first go to the channel you want to set as a preset—make sure that it is playing. Then choose a preset bank where you wish to store it (use the Preset/Direct button). Then, press and hold (for 2 seconds) the number key you wish to use for that channel. The radio will beep once and display the preset number that has been set.

To choose a preset channel, make sure you are in the right preset bank. (Press the Preset/Direct button until Preset A, Preset B, or Preset C appears.) Then, press the number key for the preset channel you wish to play.

### Menu

The menu in your Delphi XM Roady lets you change the colors and contrast of the display, set the audio level, erase song titles from your TuneSelect™ list,

change your Auto-On and Auto-Off settings, and activate or turn off Direct Tune. See your Delphi XM Roady User Guide for an explanation of these features.

To access the menu, press the Menu button, then use the Tuning Wheel to move the cursor (press in to select an option). You can back up within the menu by pressing the Menu button. The menu times out and returns to the normal display after 8 seconds if you do not move the cursor or make any choices.

### TuneSelect

TuneSelect notifies you when a favorite song is playing on a channel other than the one where you are currently tuned.

To store a song title in TuneSelect, press and hold the Tuning Wheel in for 2 seconds while listening to a song that you want to put on your TuneSelect list. The radio will beep once and display "Song Selected."

Later, when any song on your list is playing on another channel, the radio will beep once and display the song name. Press the Tuning Wheel in to go to the channel where the song is playing.

You can erase songs from your TuneSelect list by going into the menu and choosing TuneSelect. Then, follow your options to erase specific song titles or clear out all titles.

### DELPHI

The Roady name, XM name, and related logos are trademarks of XM Satellite Radio Inc.

♻️ Printed on Recycled Paper  
 ©2003 Delphi Corporation. All rights reserved.  
 DPSS-03-E-050





See your Roady™ User Guide for additional operating, installation, and safety information.